

Installing the Süka-Heaters

The Süka heaters should usually be fitted under the window or at least on the room's outside wall. It's important that a minimum of 5 cm space to the floor is allowed for.

To avoid damages on the radiator, the top cover and the side pannels should be placed aside before mounting on the wall.

1. The suspension hook for the bottom is slightly bigger and should be fixed as in diagram on the right hand.
2. Lower suspension hook (1) to be slotted into the U-rail wall bracket
3. Heater (2) is then fitted on it and tilted forwards to allow for the upper suspension hook as in (3).
4. Upper suspension hook is slotted into the holes on wall rails and held slightly higher (see 3).
5. Heater is then straightened parallel to the wall and the hook allowed to set in (see 2).
6. Place heater lid back and close it by pressing slightly.

The electricity connection is on the panel with the manufacturer's label. Take this out by unscrewing the top screw slightly to loosen up. Connection to electricity power requires a heat resistant cable as follows: (1.5mm² diameter for smaller heaters up to 2kW capacity. For 2.5kW capacity heaters, please use 2.5mm² diameter cable.

IMPORTANT: For safety purposes, please ensure that a professional electrician carries out the installation for you. Sueka accepts no responsibility for any injury or damage arising out of self-installation.

